



6160 Keypad



BASIC SYSTEM FUNCTIONALITY (4 DIGIT CODE + COMMAND BUTTON)

- ARM:** ARM AWAY: 4 DIGIT CODE + 2 (AWAY) BUTTON
ARM STAY: 4 DIGIT CODE + 3 (STAY) BUTTON
- DISARM:** 4 DIGIT CODE + 1 (OFF) BUTTON
- DOOR CHIME:** TO ENABLE CHIME ON DOORS: 4 DIGIT CODE + 9 BUTTON
(TO DISABLE – ENTER CODE + 9 AGAIN)
**'CHIME' WILL DISPLAY ON KEYPAD WHEN ENABLED*
- BYPASS:** 4 DIGIT CODE + 6 + 2 DIGIT ZONE NUMBER (EX: Zone 2 = 02)
**IF A ZONE IS IN FAULT; CAN BYPASS AND ARM THE REST OF THE SYSTEM*
- DURESS:** DISARM THE SYSTEM: ENTER 1234 AND 1
**SENDS A SILENT PANIC ALARM*
- PANIC:** PRESS AND HOLD THE * and # BUTTONS AT THE SAME TIME (AUDIBLE)

TO CHANGE MASTER CODE: ENTER 4 DIGIT MASTER CODE + 8 BUTTON (CODE) + 02 + NEW 4 DIGIT MASTER CODE. THEN ENTER NEW MASTER CODE AGAIN.

TO ADD NEW CODES: ENTER MASTER CODE + 8 BUTTON (CODE) + (03 THROUGH 48 – CODE POSITIONS) + NEW 4 DIGIT CODE (*BE SURE TO KNOW WHAT CODES ARE IN WHAT USER POSITIONS OTHERWISE YOU MAY OVERWRITE A CODE ACCIDENTALLY.)

TO DELETE CODES: ENTER MASTER CODE + 8 BUTTON (CODE) + CODE POSITION (03-48) + # + 0.