



ALARM SYSTEM QUICK REFERENCE GUIDE FOR PRO-SERIES CONTROLLER

BASIC SYSTEM FUNCTIONALITY

- ARM:** TAP THE SCREEN (IF BACKLIGHT IS OFF AND SCREEN IS DARK).
SELECT "ARM", AND THEN SELECT THE APPROPRIATE ARMING MODE:
"ARM AWAY", (ARMS ALL)
"ARM HOME", (ARMS ALL EXCEPT MOTION DETECTORS)
"ARM NIGHT", (ARMS ALL WITH ONLY MOTION DETECTORS SET FOR NIGHT MODE)
- DISARM:** IF ENTRY DELAY WAS TRIGGERED, SIMPLY ENTER YOUR 4-DIGIT CODE.
IF DISARMING FROM ARM HOME OR NIGHT, PRESS "DISARM" AND ENTER YOUR 4-DIGIT CODE.
(NOTE: "QUICK EXIT" GIVES YOU AN EXIT DELAY, ALLOWING YOU TO LEAVE THE PREMISES AND KEEP THE SYSTEM ARMED).
- BYPASS:** PRESS THE MENU ICON IN THE BOTTOM MIDDLE OF SCREEN.
SELECT SENSORS, SELECT ZONES TO BYPASS FROM LIST, SELECT THE CHECK BOX, SELECT "BYPASS SELECTED", ENTER 4-DIGIT USER CODE.
"BYPASSED" APPEARS NEXT TO THE ZONE ON THE SENSORS SCREEN.
ARM THE SYSTEM AS USUAL (REPEAT WITH NEXT ARMING UNTIL SENSOR IS FIXED).
- USER CODES:** AFTER INITIAL CODE SETUP, PLEASE CONTACT ALARM-1 FOR ASSISTANCE WITH ADDING/EDITING/DELETING USER CODES.
- DURESS:** *IF FORCED TO DISARM THE SYSTEM, ENTER THE DURESS CODE: 1234*
*SENDS A SILENT PANIC TO THE CENTRAL STATION AND POLICE ARE DISPATCHED.
- PANIC:** PRESS THE RED 3-SYMBOL PANIC BUTTON IN THE BOTTOM LEFT CORNER AND THEN SELECT THE APPROPRIATE ICON FOR FIRE, POLICE, MEDICAL OR SILENT ALARM.
- VOICE/CHIME:** SWIPE DOWN FROM TOP MIDDLE OF THE SCREEN.
MAY ADJUST SCREEN BRIGHTNESS, VOLUME AND DISABLE/ENABLE VOICE & CHIME.
MAY ALSO ADJUST BACKLIGHT TIMEOUT AND SELECT CLEAN SCREEN WHEN CLEANING.